


RJB ⁱ-CONTROL

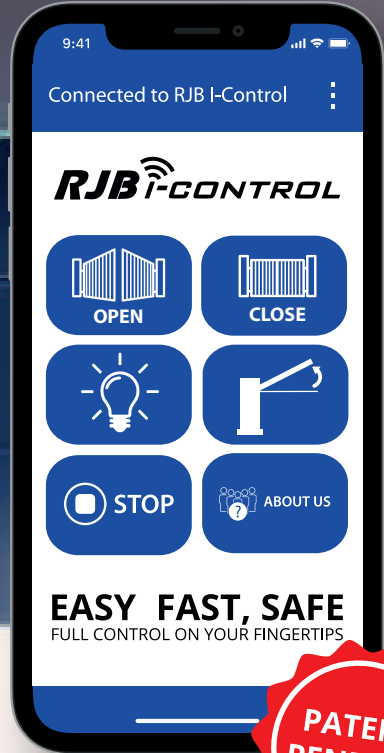

EASY, FAST, SAFE
FULL CONTROL ON YOUR FINGERTIPS



www.abermove.com



SPREADING OUR QUALITY AROUND THE WORLD

SPECIFICATIONS

- Weight: 350 g
- Inputs:
 - 12 / 24 VAC
 - 7-35 VDC
- No Polarity
- 4 Independent Contacts
- IP69K
- Dimensions: 120 x 80 x 50 mm³
- Consumption: Minimum 1A



EASY TO INSTALL



1ST STEP

Install the RJB I-Control (consult electric scheme)



2ND STEP

Download the RJB I-Control APP (IOS & Android)



3RD STEP


Connect your Smartphone to your RJB I-Control System "PAIR NEW DEVICES"

FULL CONTROL AND ACCESS TO ALL YOUR DAILY TASKS ON YOUR FINGERTIPS.

MULTI APPLICATIONS



GARAGE DOOR

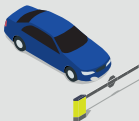

BARRIERS



 
DOORS



GATES



LIGHTS




AUTOMATIC POOL COVERS



WATER PUMPS

INFO FOR USERS

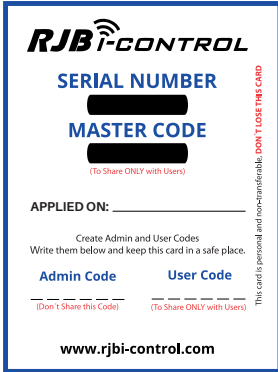


- **ADMINISTRATOR** must be the person responsible to give or take the access to all the users and should be the only one knowing the **ADMIN CODE**.
- Each **RJB I-Control** comes with a card that includes a unique **Serial Number** and **Master Code**.
- When first using your **RJB I-Control**, the **ADMINISTRATOR** is required to create his own **ADMIN CODE** and **USER CODE**.
- **MASTER CODE** and **USER CODE** should be provided to the users.
- **ADMIN CODE** and **USER CODE** can be changed at anytime, if knowing the existing **ADMIN CODE**.
- To change any code it is always necessary the **ADMIN CODE**.

- Unlimited users per each **RJB I-Control** and unlimited **RJB I-Controls** per each user.
- To be in accordance with the European Standards and Regulations, in case the **ADMIN CODE** is lost or forgotten there is no way to recover the **RJB I-Control** access.



ADMINISTRATOR

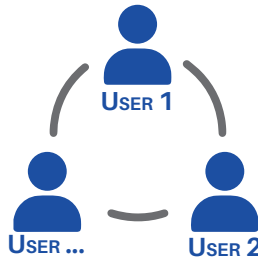

RJB I-CONTROL REPLACES ALL YOUR REMOTE CONTROLS
AND CIRCUIT BREAKERS.



PAST



**PRESENT
& FUTURE**

RJB -CONTROL



Portugal | Europe

 info@rjbi-control.com

 www.rjbi-control.com